

DM5 User Manual



Statement

The copyright of this manual belongs to Shenzhen JEHE Technology Development Co., Ltd. (Giada, JEHE's global brand) and all rights are reserved. The company reserves the right to change this manual at any time without notification. Specifications here are for reference only, please take the real product as standard.

Without official authorization of Giada, other company or individual may not copy, plagiarize, translate or disseminate this manual for commercial purpose.

The information provided in this manual is accurate and reliable. The company does not take any legal responsibility for the consequences of infringement use of this manual.

Safety Notice

- Read the user manual carefully before setting up the Giada product.
- Disconnect the power cord before installing the internal components
- Most electronic components are sensitive to static electrical charge, please wear a wrist-grounding strap when installing the internal components.
- Don't disconnect the power cord when the system is running to avoid damage to the sensitive components by instantaneous surge voltage.

Contact Information

Shenzhen JEHE Technology Development Co., Ltd.

Website: www.giadatech.com

Phone: +86-755-3330 0336

Email: support@giadatech.com

Address: 1~3/F, Block A, Tsinghua Information Harbor, North Section, Shenzhen Hi-tech Park, Nanshan District, Shenzhen, China

Table of Contents

1. Product Introduction	3
2. Interface Description and Hardware Specifications	3
2.1 Interface Description	3
2.2 Hardware Specifications	4
3. Accessories Installation Steps	6
3.1 Memory Installation	7
3.2 WiFi/3G/4G Installation	8
3.3 MSATA Installation	8
3.4 2.5” SATA Installation	9
3.5 SIM Card Installation	10
4. BIOS Setup	10
4.1 Main (Standard CMOS Setup)	13
4.2 Advanced (Advanced BIOS Setup)	14
4.2.1 ACPI Setting	15
4.2.2 Power Configuration	16
4.2.3 CPU Configuration	17
4.2.4 CMS Configuration	18
4.2.5 Network State Configuration	20

4.2.6 AMD CBS Settings	20
4.2.7 AMD PBS Settings	26
4.2.8 VLAN Configuration	28
4.2.9 MAC: IPV4 Network Configuration	30
4.2.10 MAC: IPV6 Network Configuration	30
4.3 Security Setup	31
4.4 Boot Menu	32
4.5 Save & Exit	34
5. JAHC Introduction	35
5.1 Auto Power On	35
5.2 JAHC Software	37
5.2.1 JAHC Software Functions	37
5.2.2 JAHC Software Installation Guide	37
5.2.3 Startup and Shutdown Time Setup	40
5.3 Watchdog API and Instruction	42


1. Product Introduction

Based on AMD Ryzen platform, Giada DM5 adopts AMD middle range R1305G processor. With three HDMI2.0 display outputs, it supports 4K resolution. The player is suitable to be applied in various digital signage applications.


2. Interface Description and Hardware Specifications

2.1 Interface Description


Front I/O Port

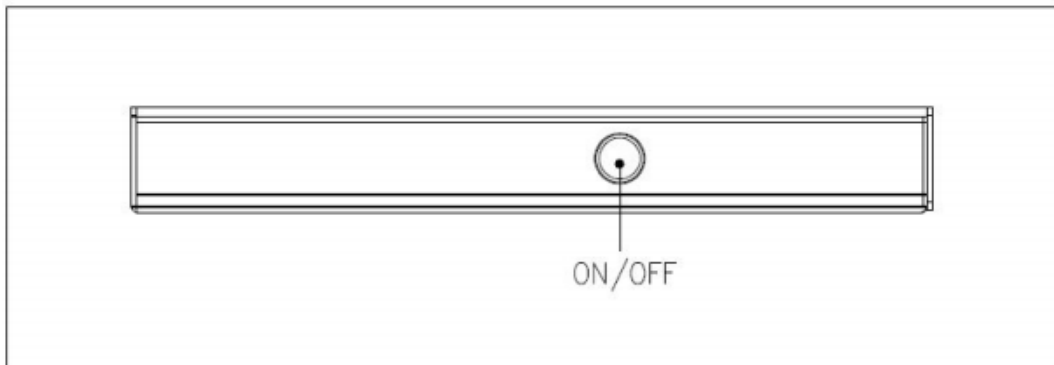


Rear I/O Port

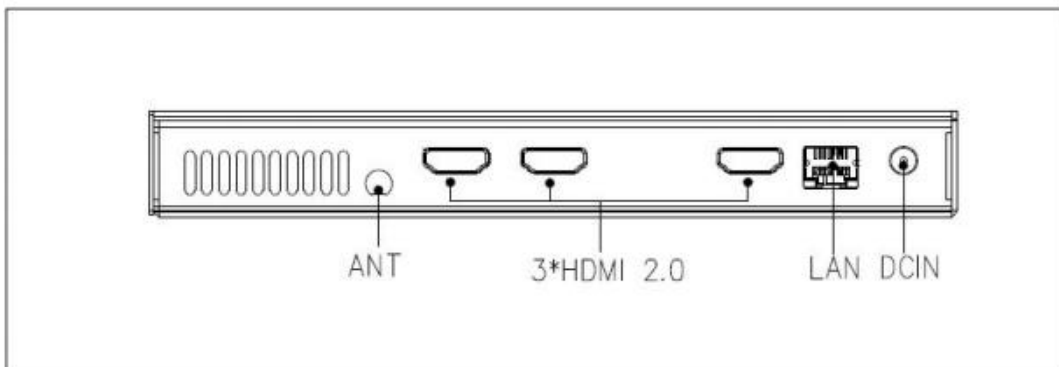

Left I/O Port

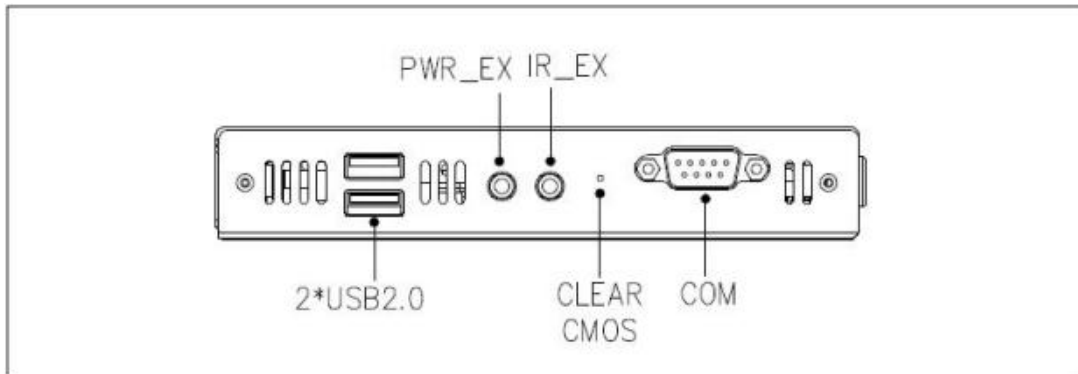

Right I/O port

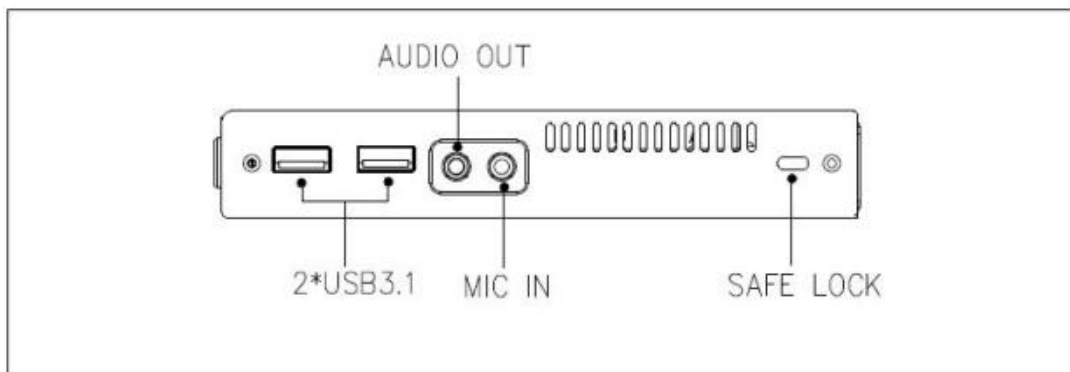

2.2 Hardware Specifications

DM5		DM5-R1305G40H0G-GIA
Processor	CPU	AMD Ryzen™ R1305G
	Frequency	1.5GHz (up to 2.8GHz), 2Cores / 4Thread
	BIOS	AMI Source Code
	Chipset	SOC
Memory	Type	DDR4
	Socket	2 x SO-DIMM
	Max Capacity	32 GB
Graphics	GPU	Radeon™ Vega 3 GPU
	Graphic Engine	DirectX12, OpenGL 4.4, OpenCL 1.2
	HDMI2.0	3 x HDMI2.0 Supporting 2 x 4K (3840x2160)@60Hz or 3 x 2K (1920x1080)@60Hz

Network	Controller	Realtek RTL8111H Gigabit Ethernet
	Interface	1 x RJ45
I/O Interface	USB	2 x USB 3.1, 2 x USB 2.0
	Serial Port	1 x RS232
	Audio	1 x MIC-IN, 1 x AUDIO-OUT
	SIM	1 x SIM Slot
	Mini PCIe #1	1 x Full-size Mini-PCIe for mSATA
	Mini PCIe #2	1 x Full-size Mini-PCIe for WiFi/BT/3G/4G
Storage	mSATA	1 x Full-size mSATA
	SATA	1 x 2.5" SATA
JAHC	JAHC	Watchdog / Auto power on/IR Remote Control / RTC/Wake On Lan
Operation System	OS	Windows 10 (64-bit) / Linux
Power	Power Type	DC-IN
	Input Voltage	19V/3.42A
Mechanical	Construction	Metal
	Mounting	Desk/VESA Mounting (JZ183)
	Dimension (W x D x H)	189.6mm x 148.3mm x 26mm
	Color	Black
Environment	Operating Temperature	0-40°C at 0.7m/s Air Flow
	Relative Humidity	95%@40°C (non-condensing)
Certification		CE, FCC

3. Accessories Installation Steps

▲ For safety reasons, please ensure that the power cord is disconnected before opening the case.

How to open the top cover and bottom cover

Unscrew the four screws and remove the top cover. (SO-DIMM #1 and 2.5" SATA slot are on top side)


Unscrew the four screws, push the bottom cover and remove it. (SO-DIMM#2, mini PCIE slot for WIFI/3G/4G, mini PCIE slot for MSATA and SIM card slot are on bottom side)



3.1 Memory Installation

▲ This product only supports DDR4 SO-DIMM memory modules.

1. Locate the SO-DIMM slot on the board.
2. Gently insert the module into the slot in a 45-degree angle.
3. Carefully push down the memory module until it snaps into the locking mechanism.

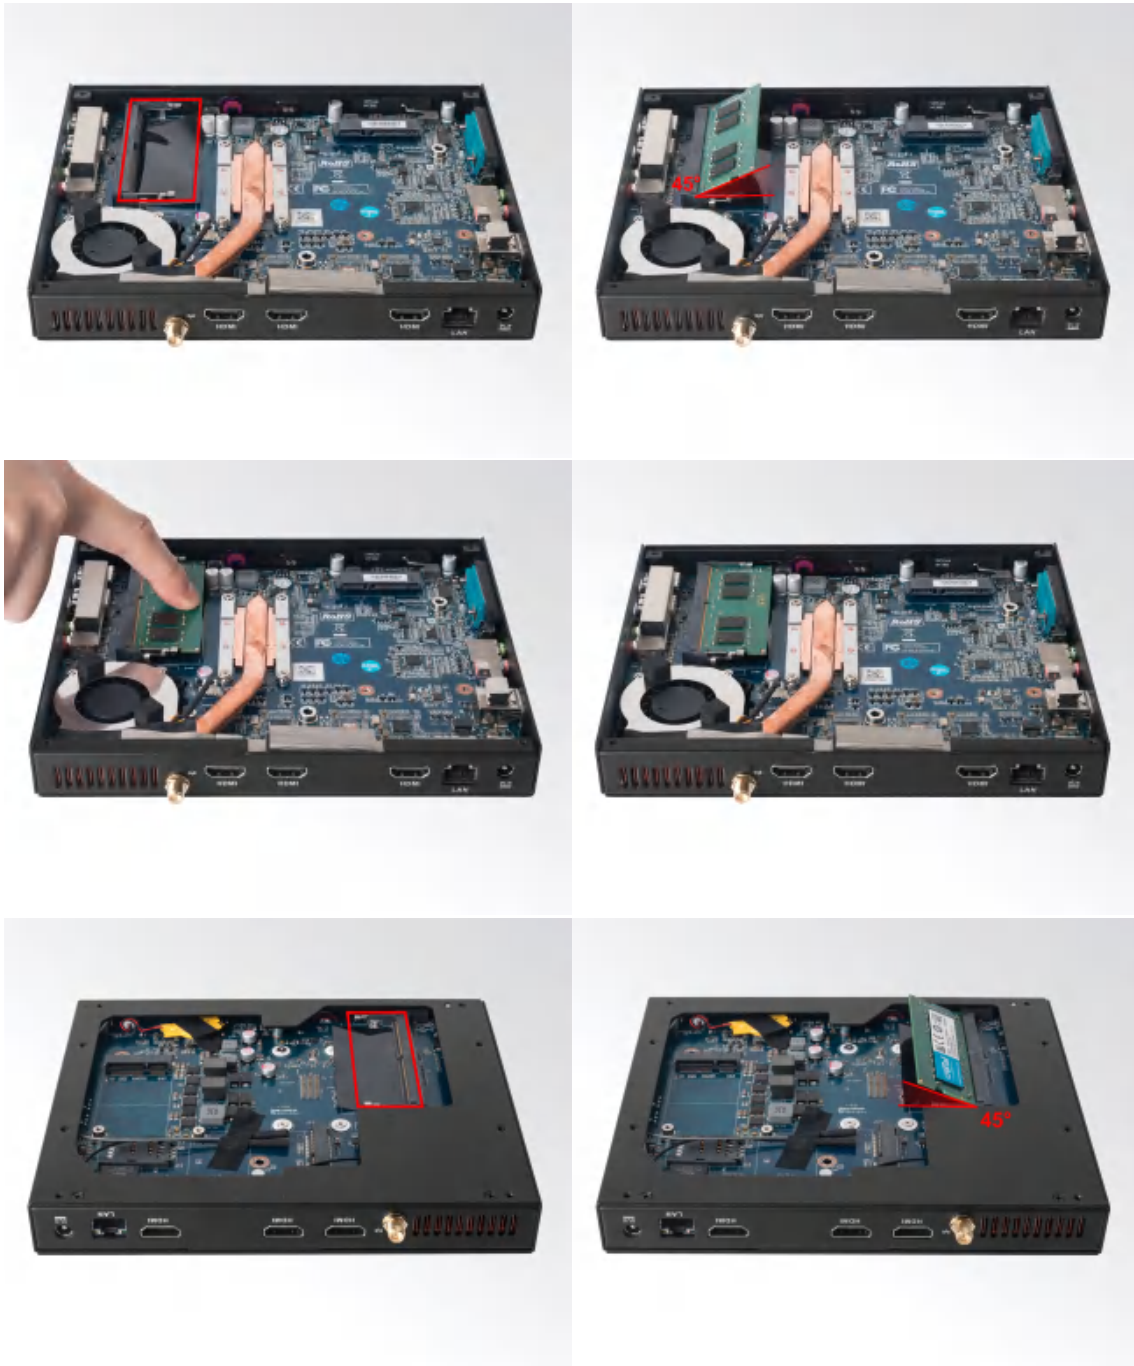

3.2 WiFi/3G/4G Installation

● WiFi Installation

1. Tighten the WIFI module and WIFI module bracket with screws.
2. Plug the WIFI module into the mini PCIE slot.
3. Secure the module to the carrier by tightening up the screw.
4. Connect the black cable to **Main** and grey cable to **AUX**. Install the antenna.

● 3G/4G Installation

▲ Default SMA connector and cable is for WIFI. Please change to 3G/4G SMA connector and cable.

1. Plug the 3G/4G module into the mini PCIE slot.
2. Secure the module to the carrier by tightening up the screw.
3. Connect the cable to **Main** and install the antenna.




3.3 MSATA Installation

1. Plug the MSATA module into the mini PCIE slot.
2. Secure the module to the carrier by tightening up the screw.



3.4 2.5" SATA Installation

1. Plug 2.5" SATA into the slot.
2. Tighten up the two screws from another (bottom) side.

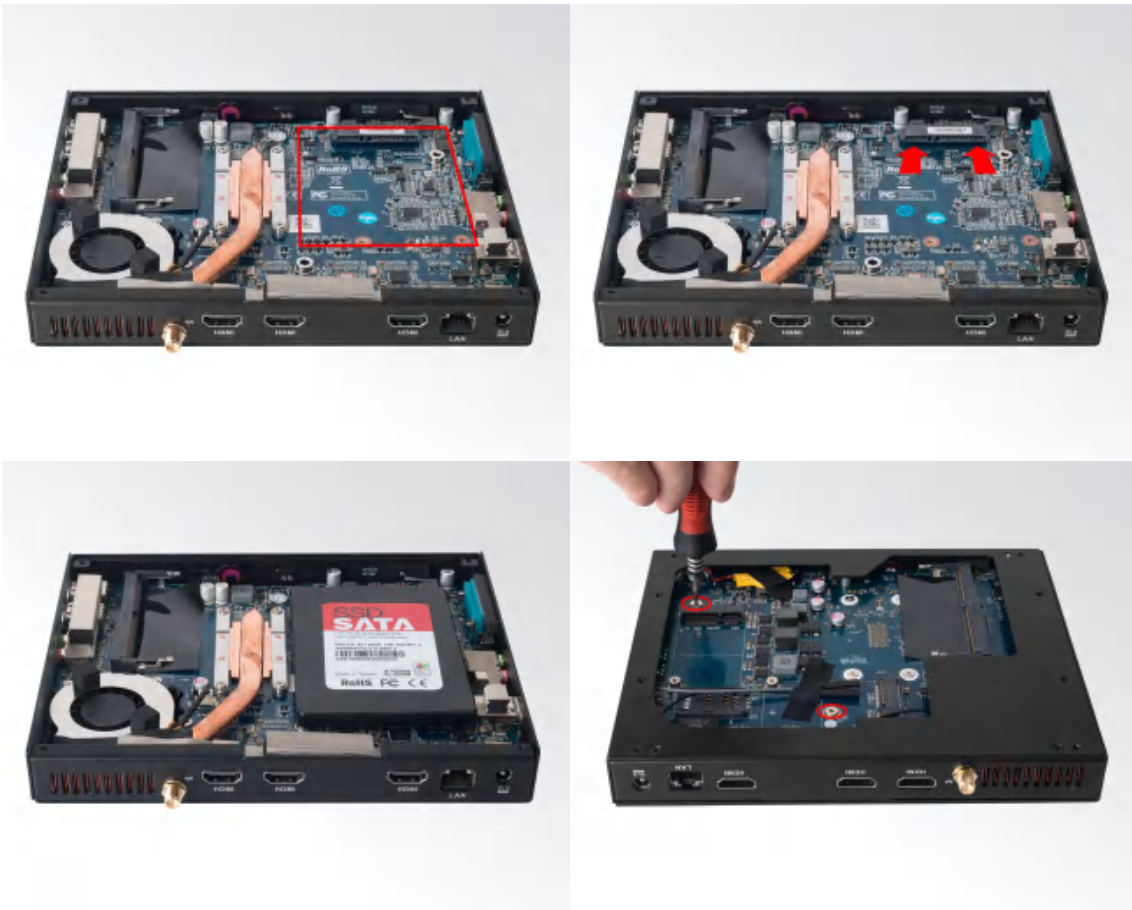

3.5 SIM Card Installation

▲ This product supports standard SIM card with the size of 25mm × 15mm.

1. [Open] the SIM card holder and pull it up.
2. Insert the SIM card.
3. [Lock] the card holder.



4. Bios Setup

Notice:

The descriptions relating to BIOS setup in this Manual is for reference only since the BIOS version of the product might be upgraded. Giada provides no guarantee that all the contents in this Manual are consistent with the information you acquired.

BIOS is a basic I/O control program saved in the Flash Memory. Bridging the motherboard and the operation system, BIOS is used for managing the setup of the related parameters between them.

When the computer is activated, the system is first controlled by the BIOS program. Firstly, a self-detection called POST is performed to check all hard devices and confirm the parameters of the synchronous hardware.

Once all detections are completed, BIOS will hand over the controlling to the operation system (OS). As BIOS serves as the only channel that connects the hardware and software, whether your computer can run stably and work in optimized state will hinge on how to properly set the parameters in BIOS. Therefore, the correct setup of BIOS plays a key role in stably running the system and optimizing its performance.

The CMOS Setup will save the set parameters in the built-in CMOS SRAM on the motherboard. When the power is shut off, the lithium battery on the motherboard will provide continuously power to CMOS SRAM.

The BIOS setup program will allow you to configure the following items:

1. HD drive and peripheral devices
2. Video display type and display items
3. Password protection
4. Power management characteristics

A. State of BIOS Setup

When the computer is started up, BIOS will run the self-detection (Post) program. This program includes series of diagnosis fixed in BIOS. When this program is executed, the following information will appear if any error is found:

Press [F1] to Run General help

Press [F2] to Load previous values and continue

To enter BIOS, you can press F2; to load the default values and enter the system, you can press DEL to enter the BIOS interface if no error occurs. If the indicative information disappears before you operate, you can shut off the computer and turn it on again, or you can press the RESET key on the product case. To restart your computer, you can also press < Ctrl > + < Alt > + < Delete > simultaneously.

B. Function Keys definitions

Hot Key	Description
↑	(Up key) Move to the previous item
↓	(Down key) Move to the next item
←	(Left key) Move to the left item
→	(Right key) Move to the right item
ESC	Exit the current interface
Page Up	Change the setup state, or add the values
Page Down	Change the setup state, or deduct the values
F1	Display the information of the current function Keys definitions.
F9	Load the optimized values
F10	Save the settings and exit the CMOS SETUP

C. Auxiliary information Main interface

When the system enters the main interface of Setup, the major selected contents will be displayed at the lower part of the interface with the change of the options.

When you set the value for each column, you can view the preset value of the column and the values that can be set if you press F2, for example, the BIOS default values or CMOS Setup values.

To exit the interface for auxiliary information, press [ESC].

1) Main menu

When the system enters the CMOS Setup menu, you can see the main menu on the upper part of the screen, as shown in Figure 1.

In this main menu, you can use the left and right direction keys to select the setup items.

Once the item is selected, the lower part of the computer screen will show the details of setting.

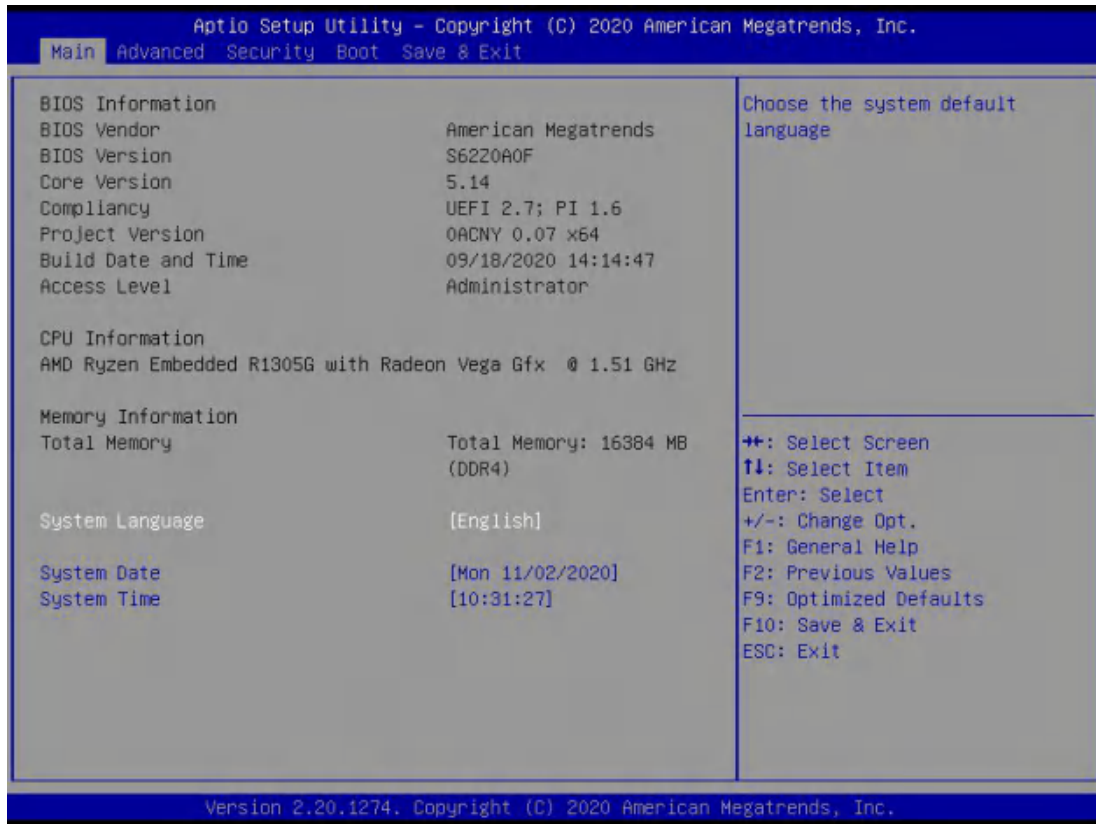


Fig 1

1) Main (standard CMOS setup)

This item is used for setting the date and time.

2) Advanced (advanced BIOS setup)

This item is used for setting the advanced functions provided by BIOS, such as specifications of PCIe facilities, CPU, HDD, etc.


3) Security (set the administrator/user password)

4) Boot (startup configuration characteristics)

5) Save & Exit (option of exit)

This item includes load optimal defaults / load failsafe defaults value / discard changes / discard changes and exit.

4.1 Main (Standard CMOS setting)

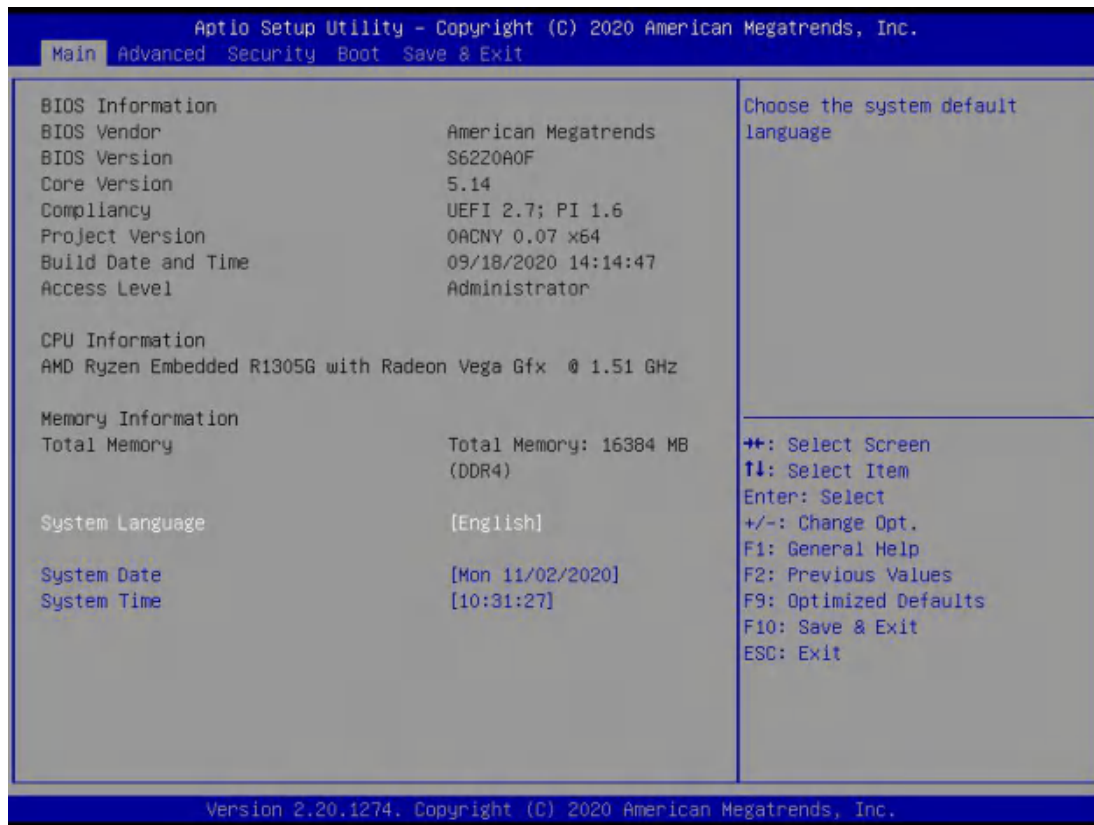

1) System time (hh:mm:ss)

Use this item to set the time for the computer, with the format as "HH / MM / SS".

2) System date (mm:dd:yy)

Use this item to set the date for the computer, with the format as "week, MM / DD / YY".

4.2 Advanced (Advanced BIOS setup)




4.2.1 ACPI Setting



ACPI Options	Description
Enable ACPI Auto Configuration	Enable or Disable BIOS ACPI AUTO Configuration
Enable Hibernation	Enable or Disabled Hibernation
ACPI Sleep state	<p>You can use the ACPI Sleep state option to control system hibernation</p> <ul style="list-style-type: none"> ● Suspend Disabled: Disable system Suspend. ● S3 (Suspend to RAM): Enable S3(Suspend to RAM)

4.2.2 Power Configuration

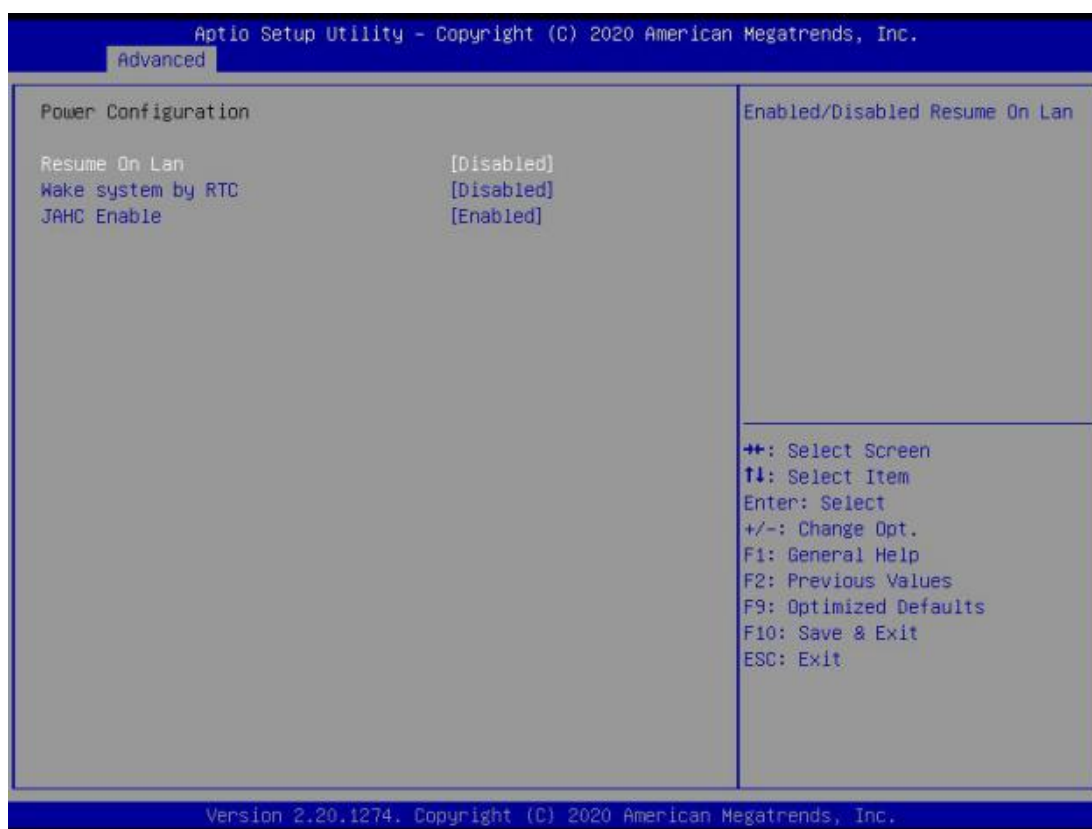

OEM Menu	Functions Description
OEM Configuration	
Resume On Lan	<p>Wake On LAN Function.</p> <ul style="list-style-type: none"> ● Disabled: The WOL is disabled by default. ● Enabled.


OEM Menu	Functions Description
Wake system by RTC	<p>Enable or disable System wake on alarm event.</p> <p>Select FixedTime, system will wake on the hr::min::sec specified.</p> <p>Select DynamicTime, System will wake on the current time + Increase minute(s).</p>
JAHC Enabled	<p>JEHE Active Hardware Control (JAHC) management system includes both hardware Micro Control Unit (MCU) and software (JAHC Technology Manager).</p> <ul style="list-style-type: none"> ● Disabled: The JAHC is disable by default. ● Enabled.

4.2.3 CPU Configuration



The menu	Description
CPU Configuration	
PSS Support	Enable/Disable the generation of APCI _PPC,_PSS and _PCT Objects
PPC Adjustment	The PPC Adjustment is PState by default.
NX Mode	Enable/disable No-execute page protection Function
SVM Mode	Enabled/disable CPU virtualization
Node 0 information	View Memory Information related to node 0.

4.2.4 CMS Configuration

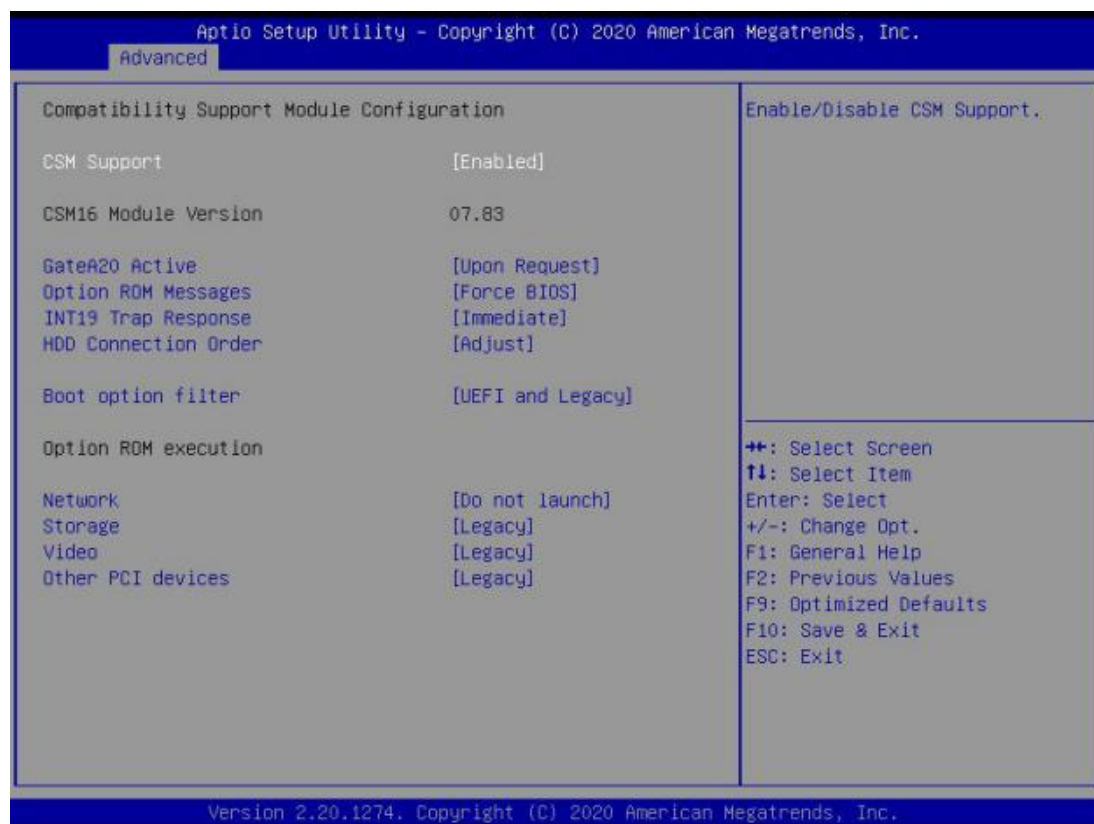

CSM Options	Description
Compatibility Support Module Configuration	
CSM Support	<ul style="list-style-type: none"> ● Enabled: The CSM support function is enable by default. ● Disabled.

CSM16 Module Version	The Current CMS Version.
GateA20 Active	<ul style="list-style-type: none"> ● Upon Request. (This option is set by default) ● Always.
Option ROM Messages	<ul style="list-style-type: none"> ● Force BIOS. (This option is set by default) ● Keep Current.
INT19 Trap Response	<ul style="list-style-type: none"> ● Immediate (This option is set by default) ● Postponed.
HDD Connection Order	<ul style="list-style-type: none"> ● Adjust. (This option is set by default) ● Keep.
Boot option filter	<ul style="list-style-type: none"> ● UEFI and Legacy: It will support both UEFI and legacy mode. ● Legacy only: It only supports legacy mode. ● UEFI only: It only supports UEFI mode.
Option ROM Execution	
Network	Network ROM Boot. <ul style="list-style-type: none"> ● Do not launch: Do not Boot. ● UEFI: It will support UEFI mode network ROM. ● Legacy: It will support legacy mode network ROM.
Storage	Storage ROM Boot. <ul style="list-style-type: none"> ● Do not launch: Do not Boot. ● UEFI: It will support UEFI mode storage ROM. ● Legacy: It will support legacy mode storage ROM.
Video	Video ROM Boot. <ul style="list-style-type: none"> ● UEFI: It will support UEFI mode Video ROM. ● Legacy: It will support Legacy mode Video ROM.
Other PCI devices	<ul style="list-style-type: none"> ● Do not launch: Do not Boot. ● UEFI: It will support UEFI mode PCI ROM. ● Legacy: It will support Legacy mode PCI ROM.

4.2.5 Network State Configuration



You can enable or disable IPV4 PXE and IPV6 PXE Boot function via Network Stack.

4.2.6 AMD CBS Settings



Options	Description
AMD CBS	
NBIO Common Options	NBIO Common Options
FCH Common Options	FCH Common Options

4.2.6.1 NBIO Common Options




Options	Description
NBIO Common Options	
GFX Configuration	The user can set this item as enable, forces and Auto.
Fan Control	AUTO: use default fan controller settings Manual: user can set customized fan controller settings.

4.2.6.1.1 GFX Configuration





Options	Description
GFX Configuration	
Integrated Graphics Controller	<p>Enabled Integrate Graphics controller.</p> <ul style="list-style-type: none"> ● Disabled. ● Forces. ● Auto.
UMA Above 4G	<p>If requested UMA frame buffer size can't be fit under 4GB or the system has enough available memory above 4GB, this option may be set to TRUE to allow UMA frame buffer size to be allocated successfully.</p>
NB Azalia	<p>Enabled Integrate HD Audio controller.</p> <ul style="list-style-type: none"> ● Disabled. ● Forces. ● Auto.NB. Azalia item is auto by default.


4.2.6.1.2 Fan Control

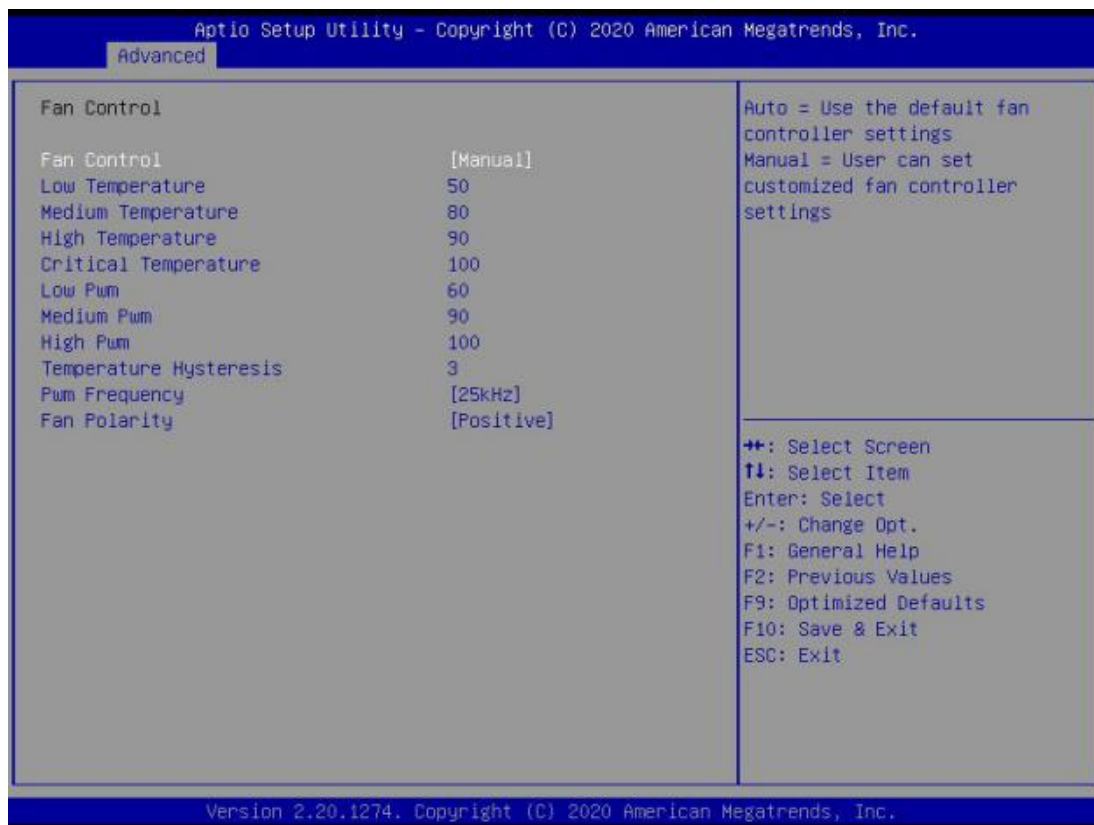

Fan Control	Description
Fan Control	<ul style="list-style-type: none"> ● Manual. ● Auto. Fan Control is auto by default.
Low Temperature	Low Temperature
Medium Temperature	Medium Temperature
High Temperature	High Temperature
Critical Temperature	Critical Temperature
Low PWM	Low PWM (0-100)
Medium PWM	Medium PWM (0-100)
High PWM	High PWM (0-100)
Temperature Hysteresis	Temperature Hysteresis
PWM Frequency	100HZ 25KHZ.This item is 25KHZ by default.
Fan Polarity	Negative Positive. The Fan Polarity value is positive by default.

4.2.6.2 FCH Common Option

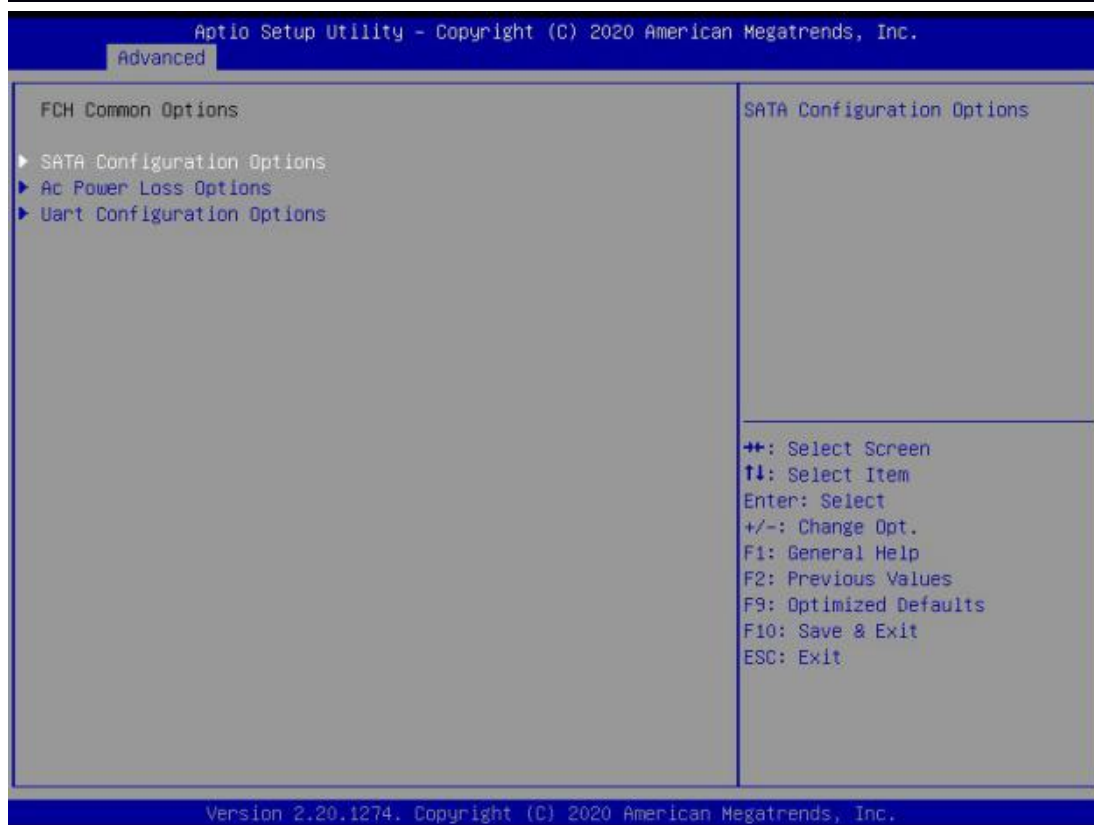
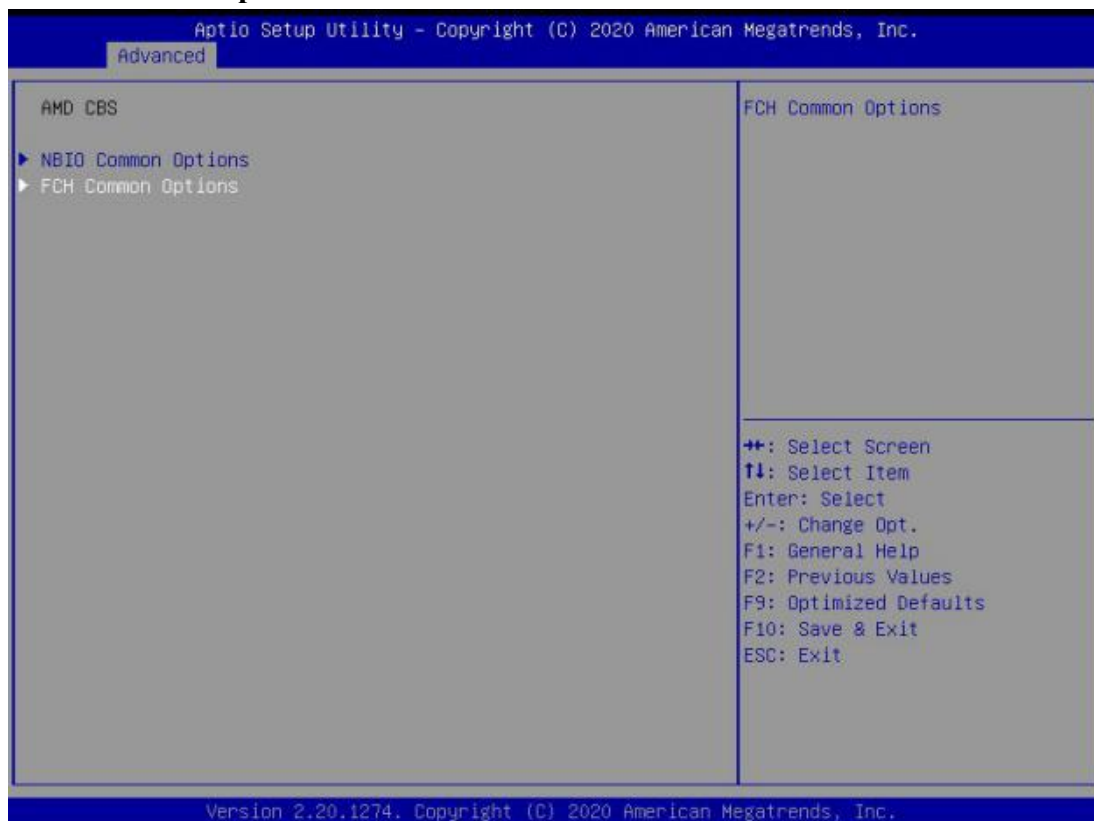


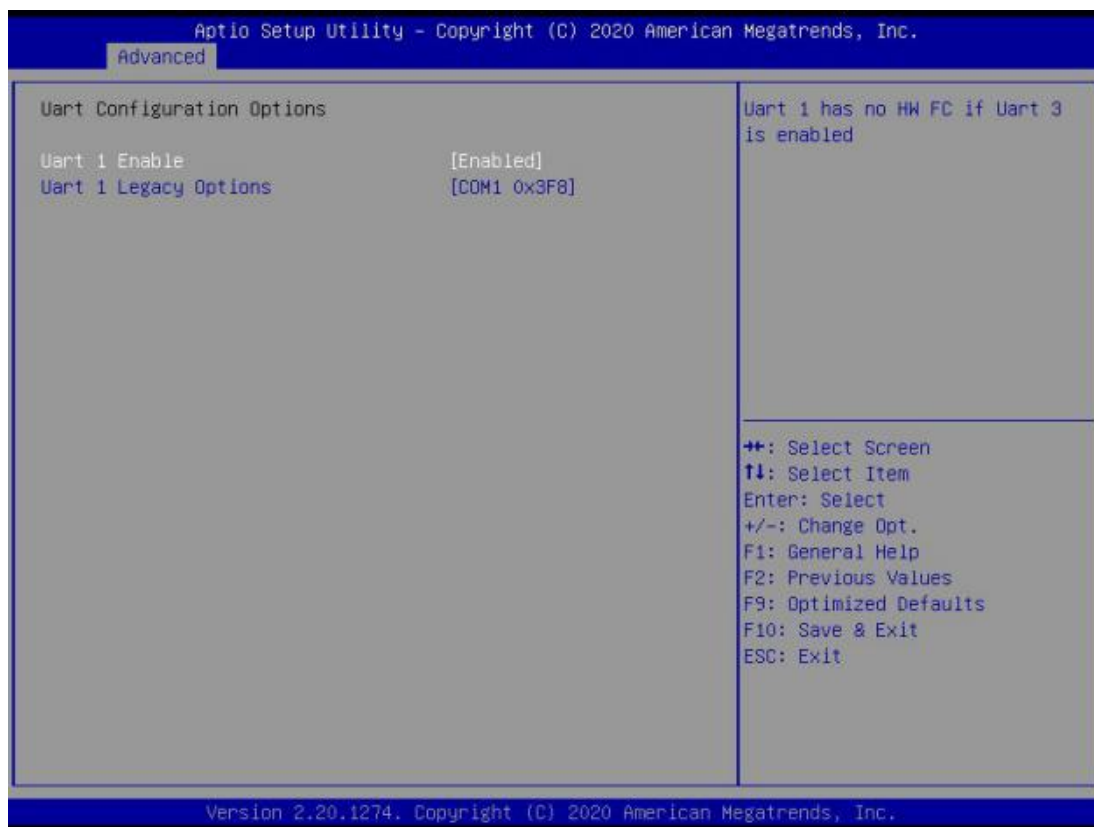


FCH Common Options	Description
SATA Configuration Options	
SATA Controller	SATA Controller. <ul style="list-style-type: none"> ● Disabled. ● Enabled: The SATA controller is enabled by default.
Ac Power Loss Options	
AC Loss Control	Specify what state to go to when power is re-applied after a power failure <ul style="list-style-type: none"> ● Always Off: If set it as Always Off, it means the system will remain shutdown state ● Power On: If set it as Power On State, it means the system will be power on automatically. ● Previous: If set it as previous, it means the system will keep State of last setup.
Uart Configuration Options	
Uart 1 Enable	<ul style="list-style-type: none"> ● Disabled. ● Enabled. This item is enabled by default.

FCH Common Options	Description
Uart 1 Legacy Options	<ul style="list-style-type: none"> ● Disabled. ● COM1 0x3F8.

4.2.7 AMD PBS Settings

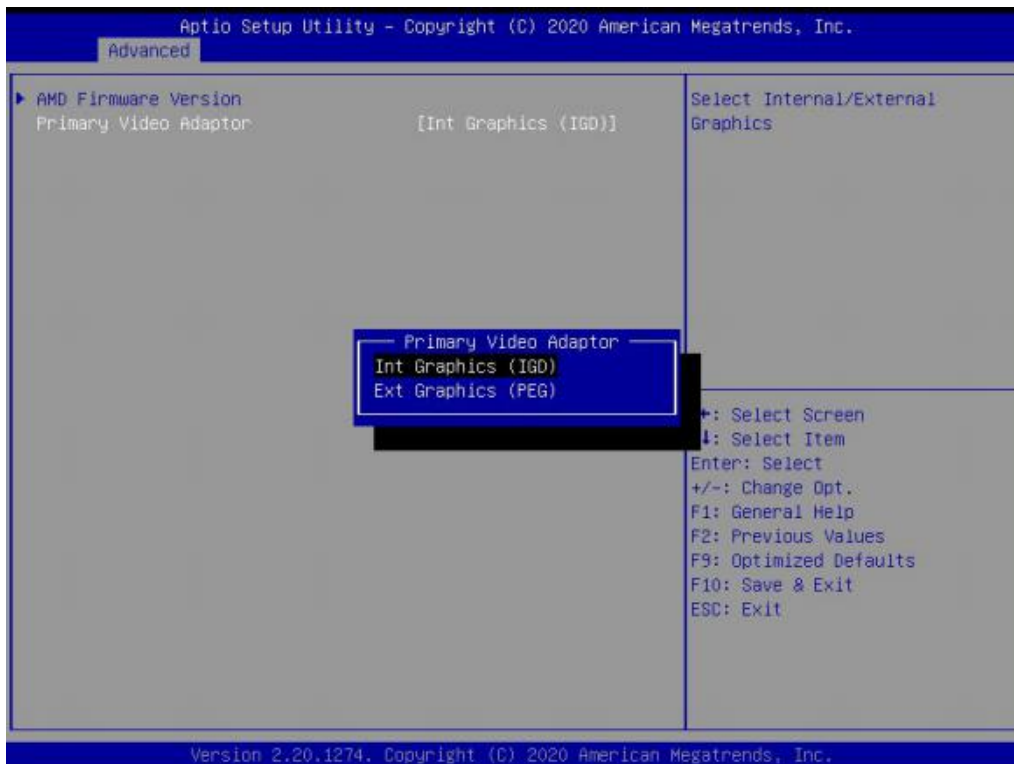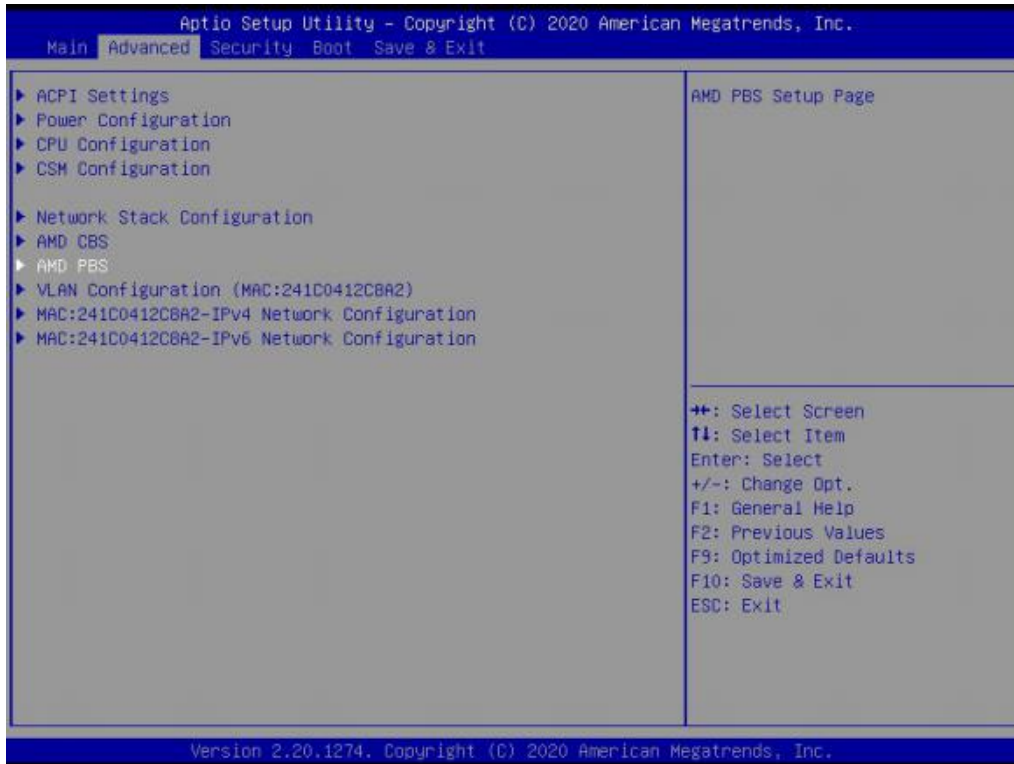

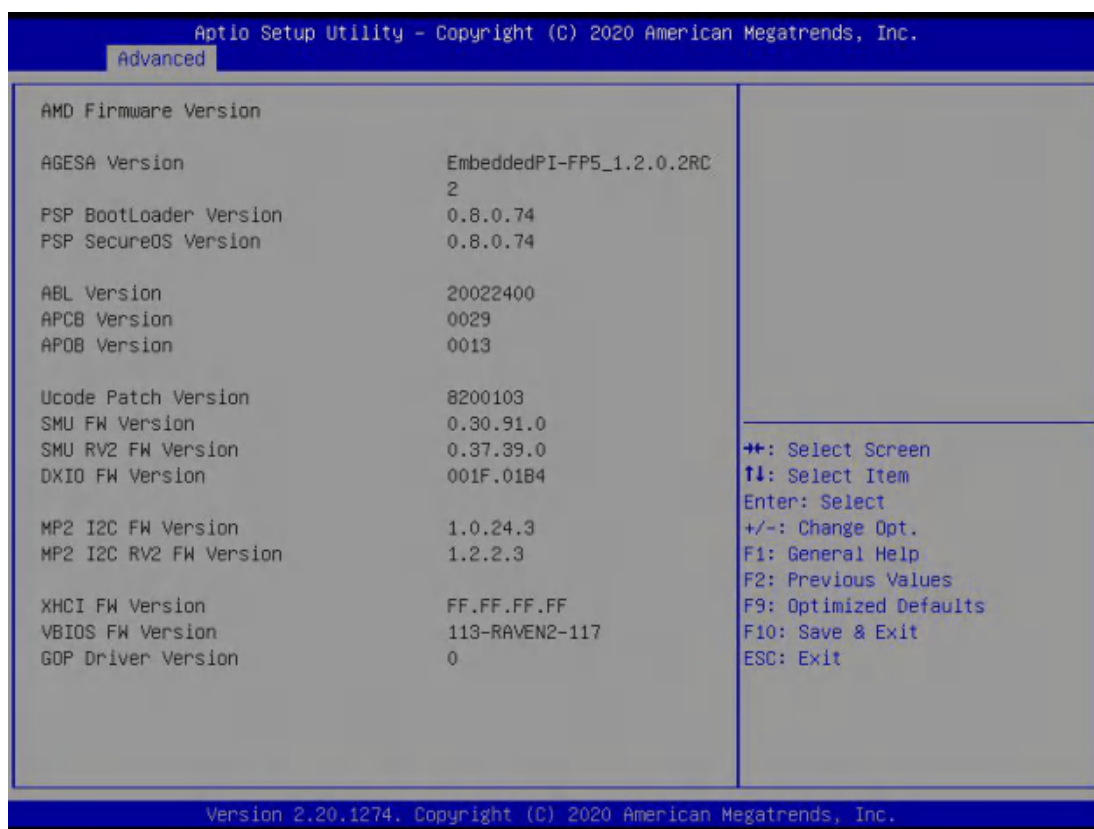

AMD PBS Options	Description
AMD Firmware Version	
Primary Video Adapter	<ul style="list-style-type: none"> ● Int Graphics (IGD). This item is enabled by default. Select IGD used by the internal graphics device. ● Ext Graphics (PEG). Select PEG used by the extend graphics device.

4.2.8 VLAN Configuration

Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.

Main **Advanced** Security Boot Save & Exit

<ul style="list-style-type: none"> ▶ ACPI Settings ▶ Power Configuration ▶ CPU Configuration ▶ CSM Configuration ▶ Network Stack Configuration ▶ AMD CBS ▶ AMD PBS ▶ VLAN Configuration (MAC:241C0412C8A2) ▶ MAC:241C0412C8A2-IPv4 Network Configuration ▶ MAC:241C0412C8A2-IPv6 Network Configuration 	<p>VLAN Configuration (MAC:241C0412C8A2)</p> <hr/> <p> ++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit </p>
--	---

Version 2.20.1274. Copyright (C) 2020 American Megatrends, Inc.

Aptio Setup Utility - Copyright (C) 2020 American Megatrends, Inc.


Advanced

<p>Create new VLAN</p> <p>VLAN ID <input type="text" value="0"/></p> <p>Priority <input type="text" value="0"/></p> <p>Add VLAN</p> <p>Configured VLAN List</p> <p>Remove VLAN</p>	<p>VLAN ID of new VLAN or existing VLAN, valid value is 0~4094</p> <hr/> <p> ++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F9: Optimized Defaults F10: Save & Exit ESC: Exit </p>
---	---

Version 2.20.1274. Copyright (C) 2020 American Megatrends, Inc.


Options	Description
Trusted Computing	
TPM20 Device Found Firmware Version: Vendor:	It shows the information of TPM device.
SHA-1 PCR Bank	Disable or Enable the SHA-1 PCR Bank. The option is enabled by default.
SHA256 PCR Bank	Disable or Enable the SHA256 PCR Bank. The option is enabled by default.
Pending operation	It includes None and TPM Clear function.
Platform Hierarchy	Disable or Enable the Platform Hierarchy.
Storage Hierarchy	Disable or Enable the Storage Hierarchy.
Endorsement Hierarchy	Disable or Enable the Endorsement Hierarchy.
TPM2.0 UEFI spec version	TPM2.0 UEFI Options, TCG_1_2 or TCG_2. The version is TCG_2 by default.
Physical Presence Spec Version	You can choose 1.2 or 1.3. The version is 1.3 by default.
TPM 20 Interface Type	TPM2.0 Interface Type is TIS by default.
Device Select	You can select TPM1.2 or TPM2.0 or Auto. Auto is set up by default.

4.2.9 MAC: IPV4 Network Configuration

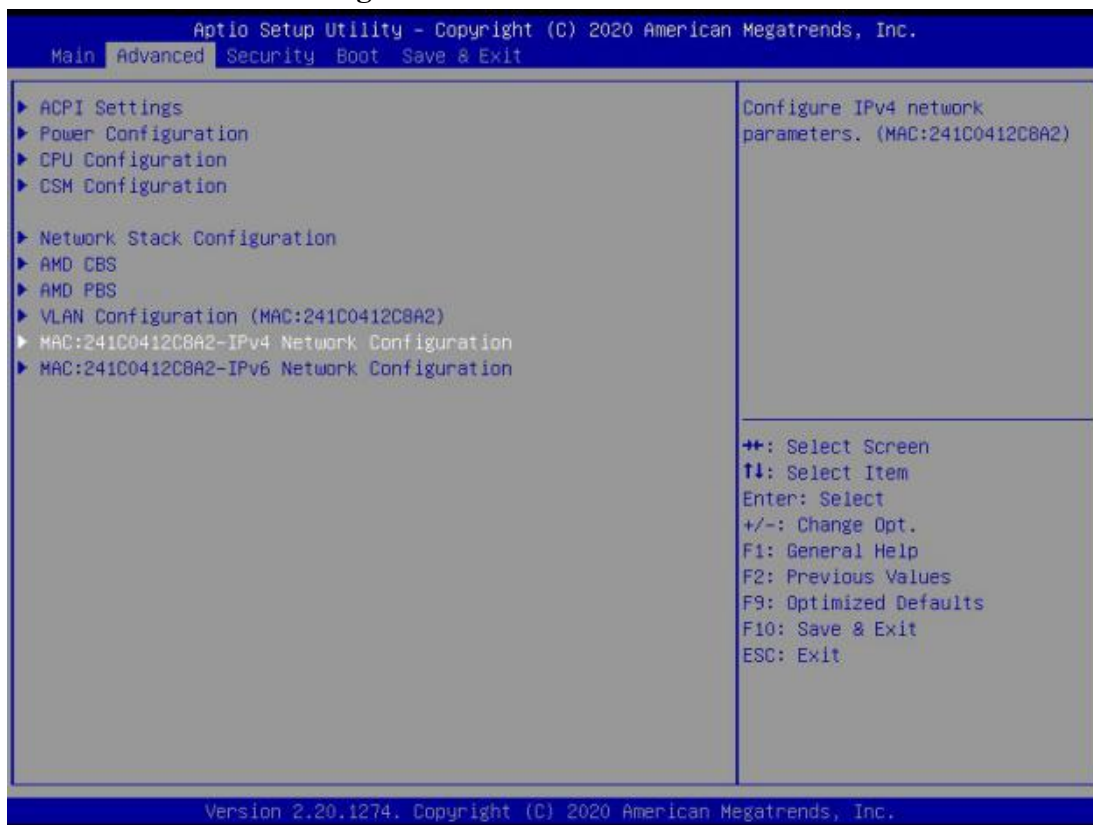


Configuration IPV4 network parameters.

4.2.10 MAC: IPV6 Network Configuration

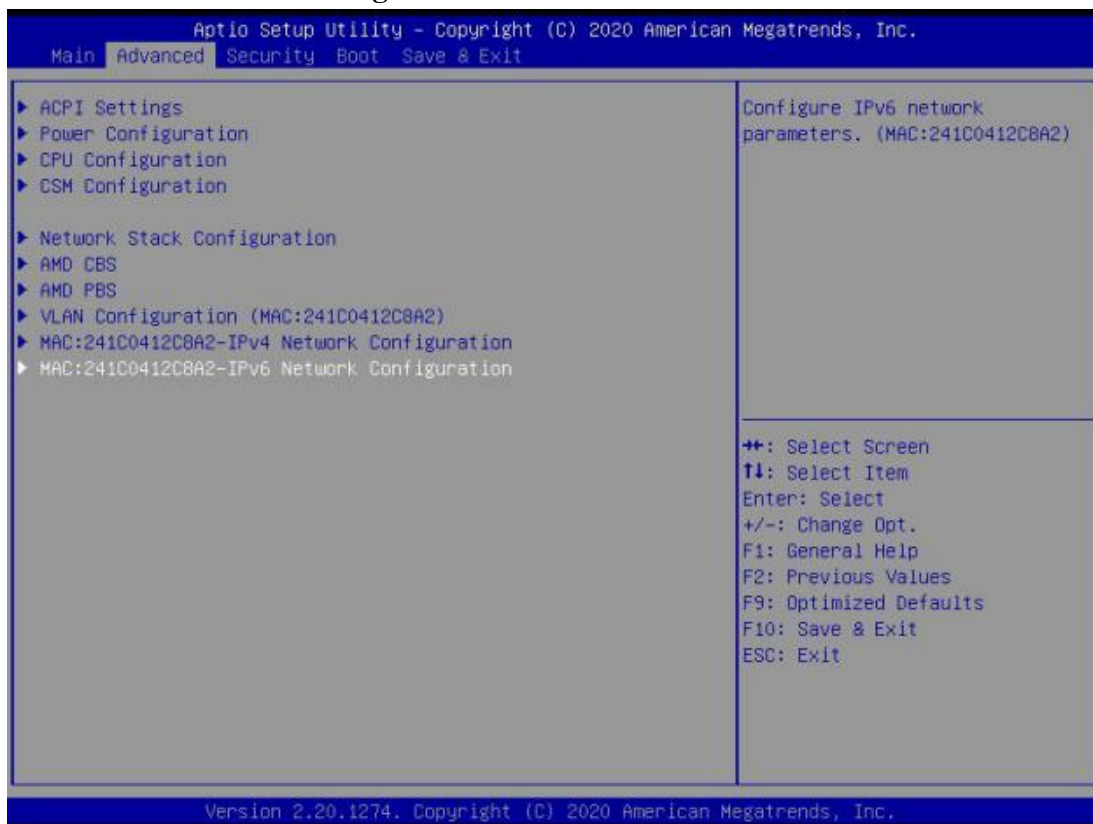

Configuration IPV6 network parameters.

4.3 Security Setup (set the administrator/user password)

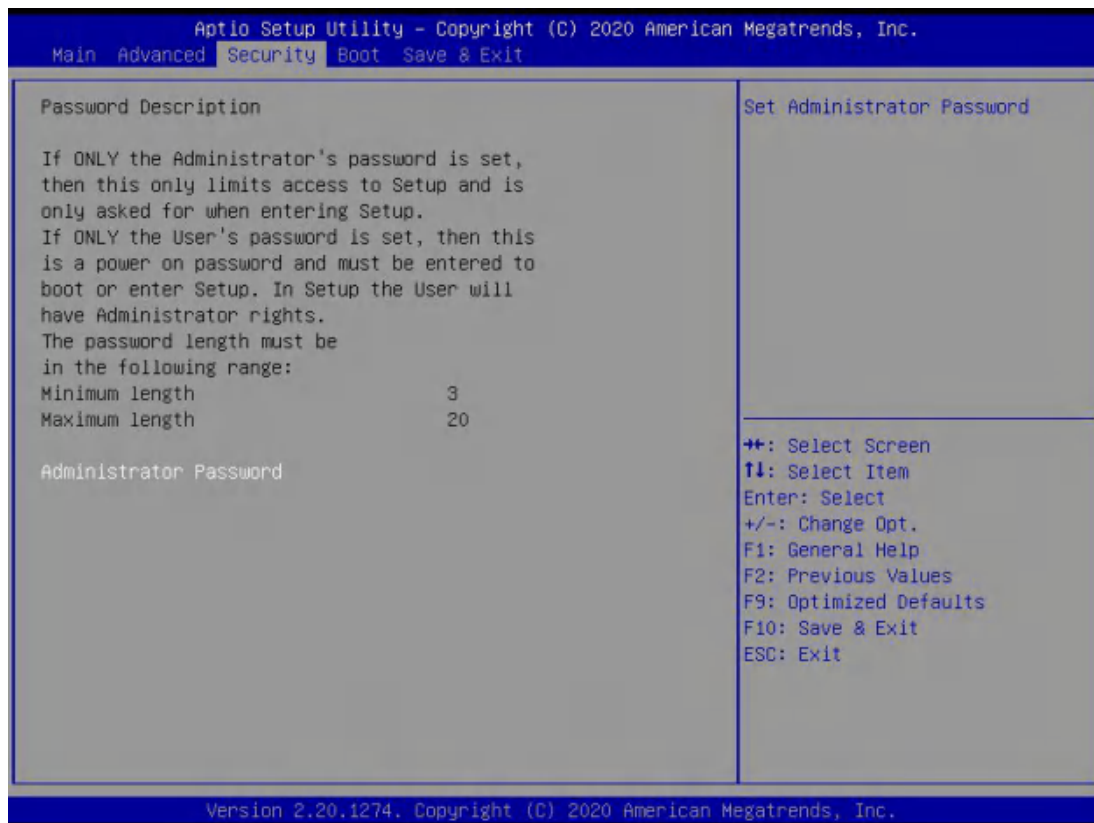

If this function is selected, the following information will appear:

Enter New Password hhhhhh


Then enter a password which is no more than eight characters and press <Enter>. BIOS will require to enter the password again.

Once you enter it again, BIOS will save the set password. Once the password item is enabled, you will be required to enter the password every time before the system entering to the setup program of BIOS. The user can set this item through the Security Option in advanced BIOS properties. If the Security Option is set as System, the password will be required to be entered before both the system guides and entering to the setup program of BIOS. If it is set as Setup, the password will be required to be entered only before the system entering to the setup program of BIOS.

To delete the password, press <Enter> in the popped-up window that requires to enter the password. Then information for confirmation will appear on the screen to allow you decide whether the password will be disabled. Once the password is disabled, you can enter the setup program directly without password when the system is restarted.

Boot Sector Virus Protection. This item is used for setting the alarm function in case of virus attack in IDE disk sector. If this item is set as Enable and some program writes information in the sector, BIOS will display alarm information on the screen and buzz.


4.4. Boot Menu

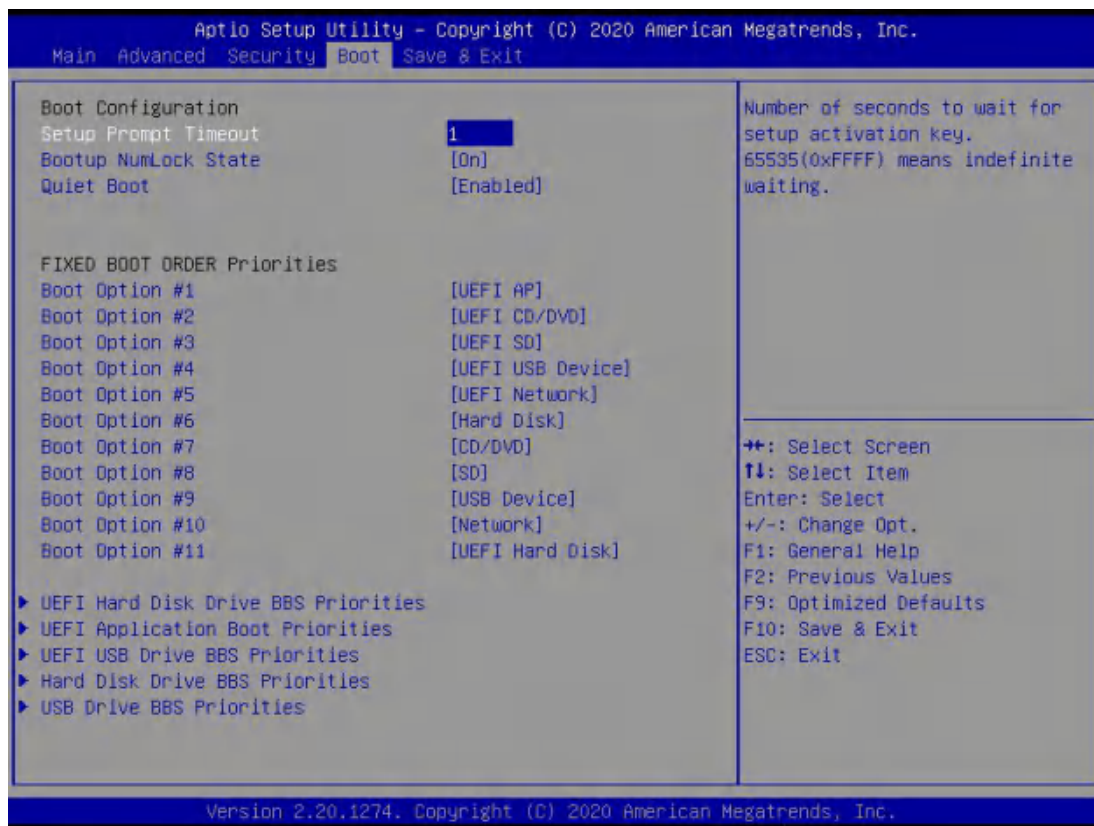

Boot Item	Description
Boot Configuration	
Setup Prompt Timeout	This item is use to set the wait time of entering the operation system. During the BIOS post, if user doesn't press the keyboard, it won't respond unless you reboot the BIOS. The Setup Prompt Timeout is 3s by default. You can set the time as you want.
Bootup NumLock State	Options are OFF and ON. In other words, this item can be used to set the state of Num Lock after entering the system. It can be set according to user's needs and doesn't affect the performance of the computer.
Quiet Boot	If this item is set as Enabled, the system can be started within five seconds and some detection items will be ignored. The options are [Disabled] and [Enabled].
FIXED BOOT ORDER Priorities	
Boot Option #1	The first boot device. If BIOS doesn't detect the first boot device, it will check the second boot device.

Boot Item	Description
Boot Option #2	The second boot device.
Boot Option #3	The third boot device.
Boot Option #4	The fourth boot device.
Boot Option #5	The fifth boot device.
Boot Option #6	The sixth boot device.
Boot Option #7	The seventh boot device.
Boot Option #8	The eighth boot device.
Boot Option #9	The ninth boot device.
Boot Option #10	The tenth boot device.
Boot Option #11	The eleventh boot device.
UEFI Hard Disk Drive BBS Priorities	You can set and management UEFI hard device after enabling this option.
UEFI Application Boot Priorities	You can set and management UEFI hard disk after enabling this option.
UEFI USB Drive BBS Priorities	You can set and management UEFI USB device after enabling this option.
Hard Drive BBS Priorities	You can set and management legacy Hard disk device after enabling this option.
USB Drive BBS Priorities	You can set and management legacy USB device after enabling this option.

4.5 Save & Exit

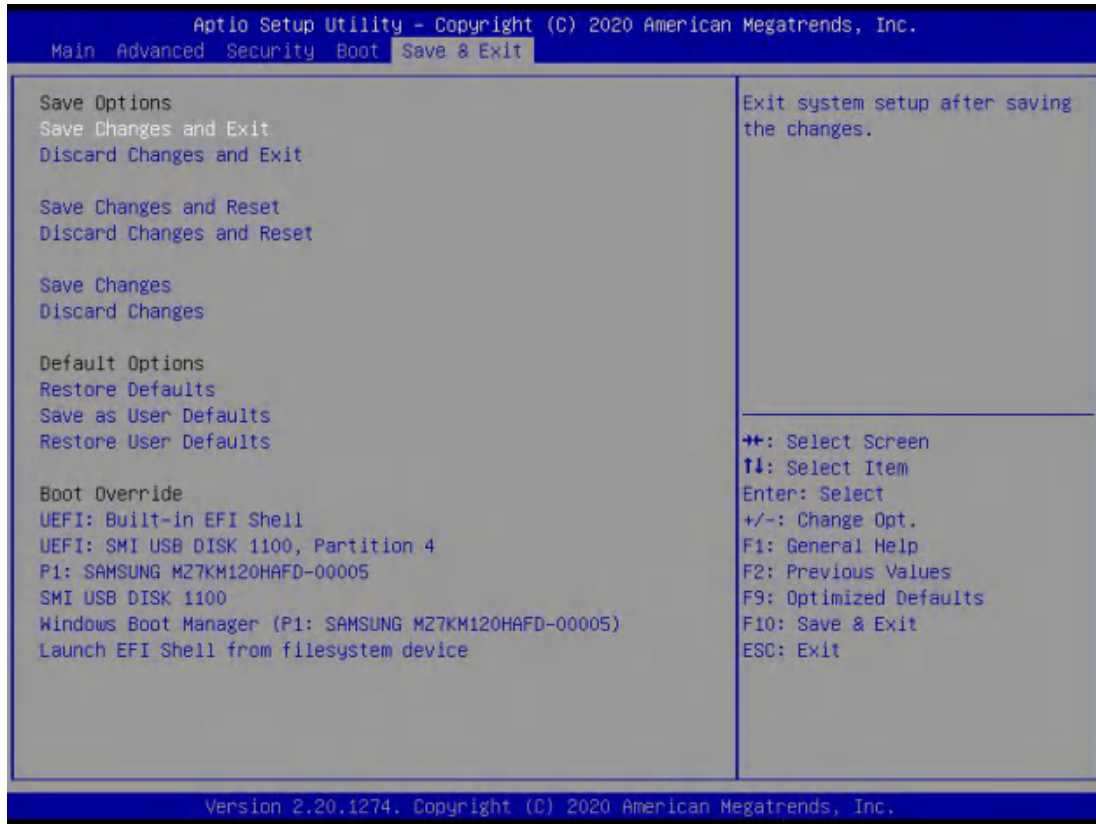

Save Exit Item	Description
Save Options	
Save Changes and Reset	Save all changes and exit
Discard Changes and Reset	Give up the settings and exit.
Restore Defaults	Recover it to default.
Boot Override	Whole Boot devices

5. JAHC Introduction

JEHE Active Hardware Control (JAHC) management system includes both hardware Micro Control Unit (MCU) and software (JAHC Technology Manager). It can support following functions:

1. Automatically boot up when power on. It is controlled by the Micro Control Unit (MCU) chip.
2. Real Timer Controller (RTC) wake up: user can install the JAHC software to set up automatic startup and shutdown, one week as a circle.
3. Watchdog timer. It is a built-in API interface.
4. Infrared remote control (Optional IR controller).


5.1 How to set up Auto power on function

Automatically reboot when power on


The function of automatically reboot when power on is controlled by hardware. You can enable it by switching the JAHC button to “on”.

If you cannot find the physical switch on the player, then you can go into the BIOS to enable it by following steps:


- a. Turn on the player and continually press ‘Del’, then it can enter BIOS setup menu.

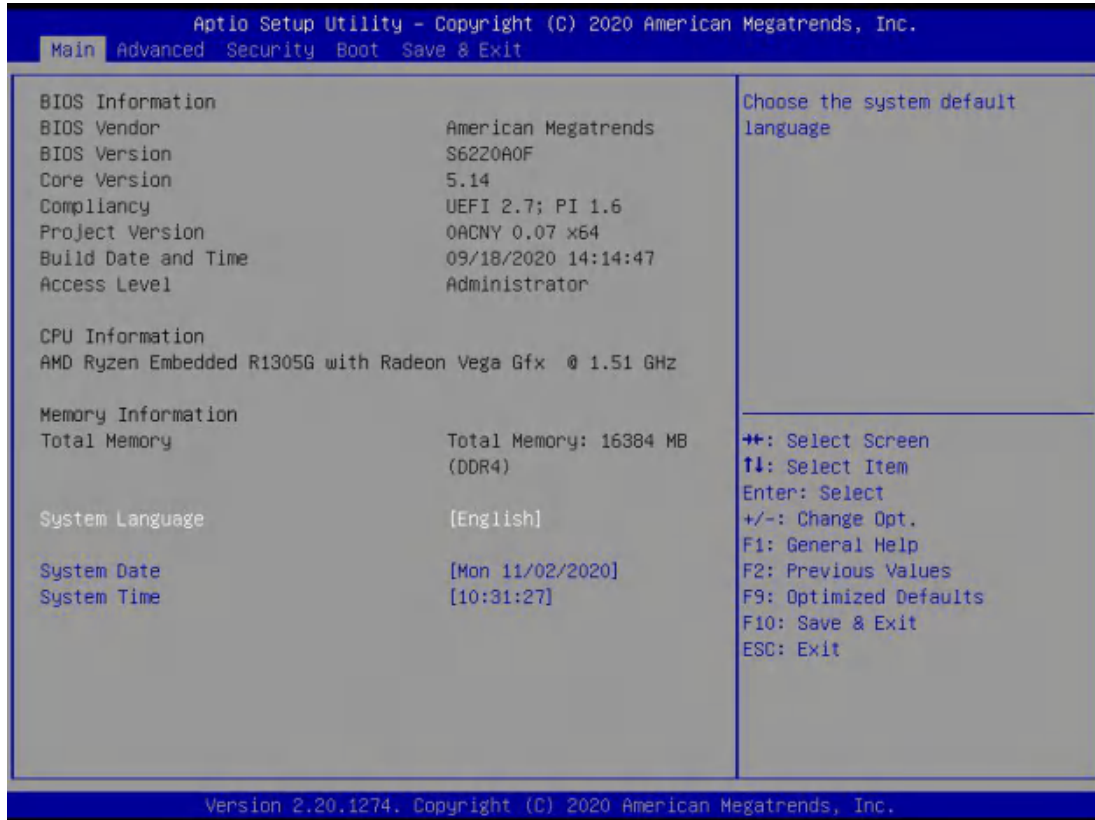

b. Select Advanced- > Power Configuration- > JAHC Enable- > Enabled.

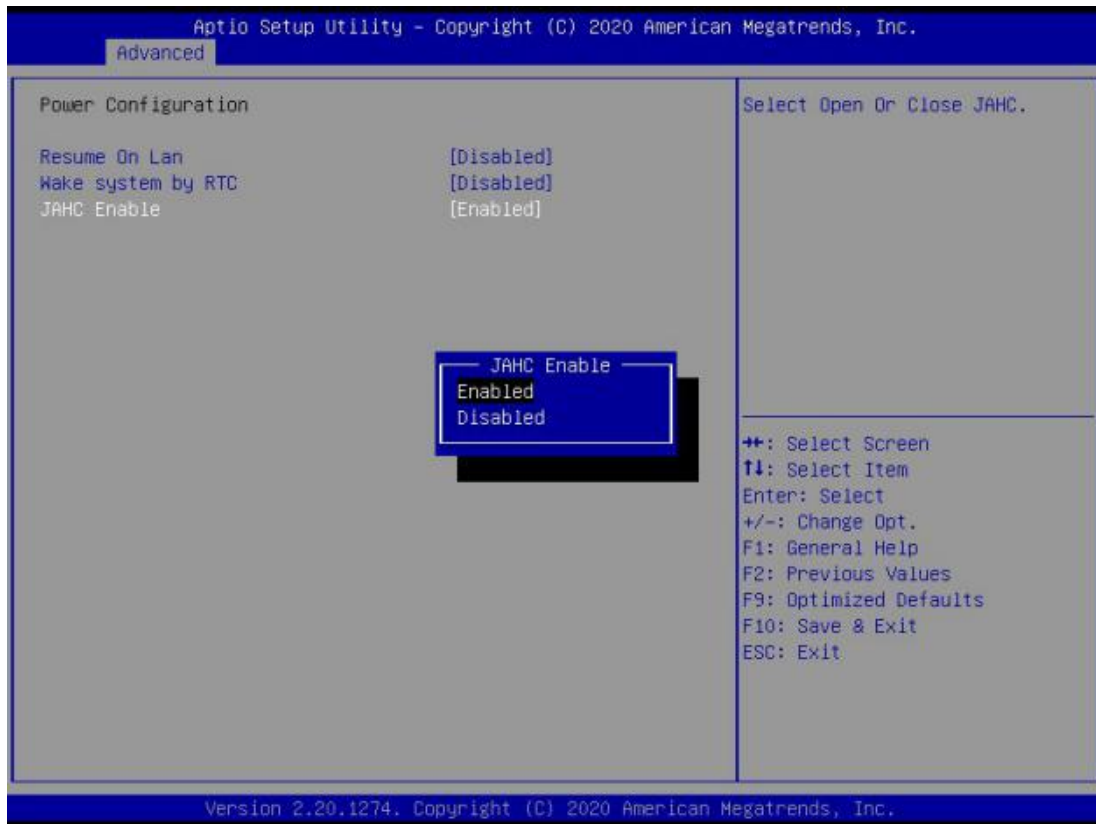

c. Press 'F10' to save change & exit after select "JAHC enabled" option.

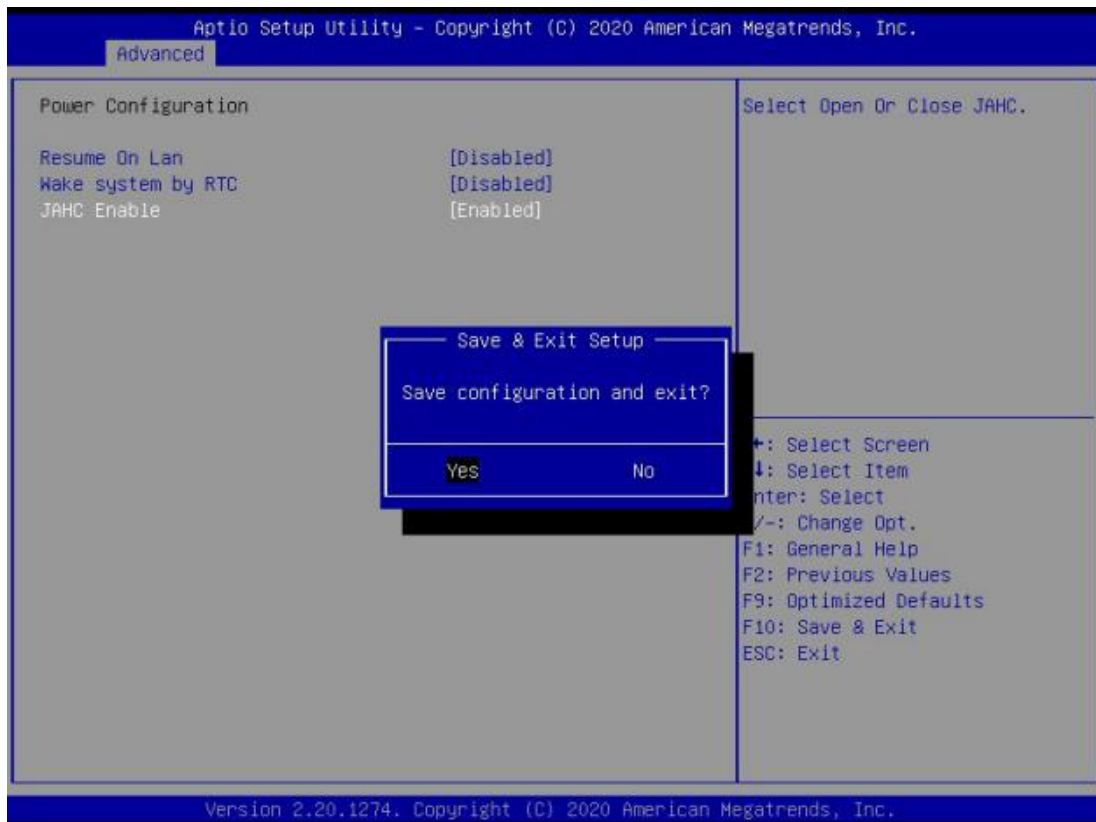

5.2 JAHC software

5.2.1 JAHC software functions

- RTC wake up. The user can set up automatic startup and shutdown, one week as a circle
- Caution message prior to shutdown to remind user to save the data. User can also choose to postpone the shutdown process.
- When JAHC is running, it can support reboot automatically when system is crashed. No additional settings needed.

5.2.2 JAHC software installation guide


System Requirements:

- Giada player with JAHC function.
- Switch the JAHC button to “on” or enable it in BIOS if there is no physical button on the chassis.
- Supported operation system: Windows 10 64bit, Linux 64bit.


How to install JAHC software:

Please download the JAHC.EXE from Giada website: www.giadatech.com, then follow up below steps:


- Double-click the JAHC.EXE file, the setup wizard will pop up, select destination location and click [Next] button to continue the installation.

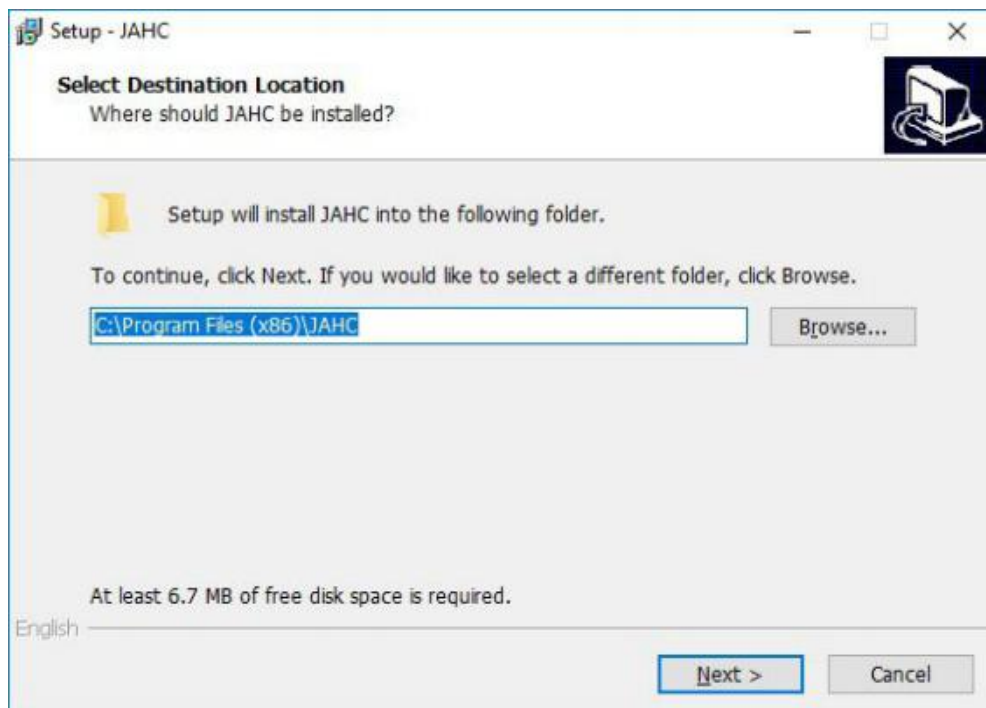



b. Click [Next] button to continue the installation.

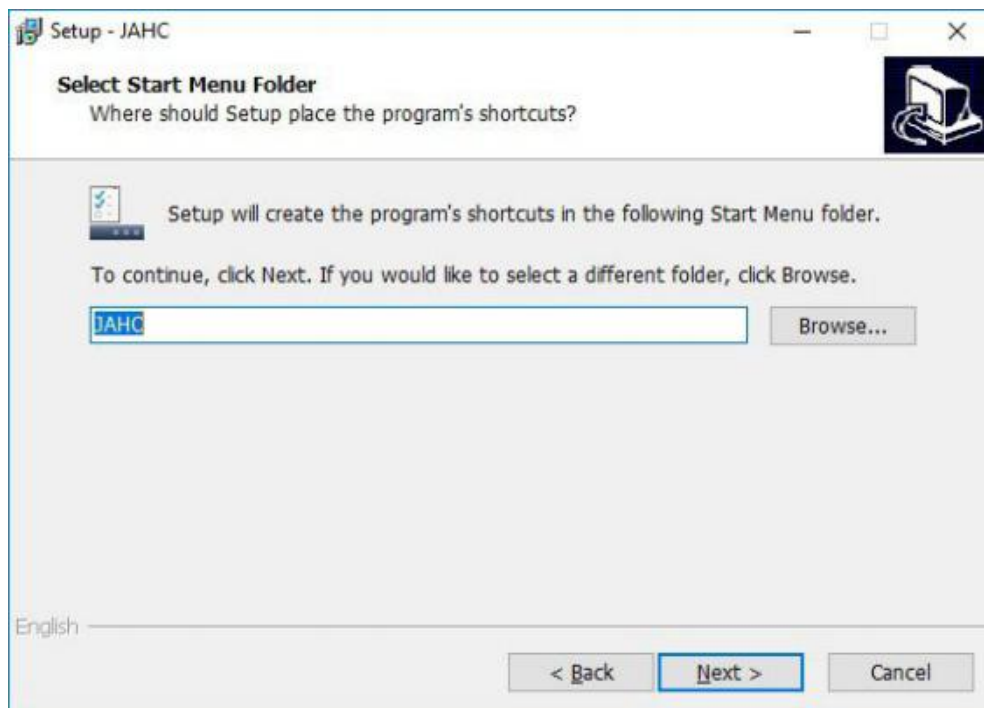

c. Select [Create a desktop shortcut] and click [Next] button.

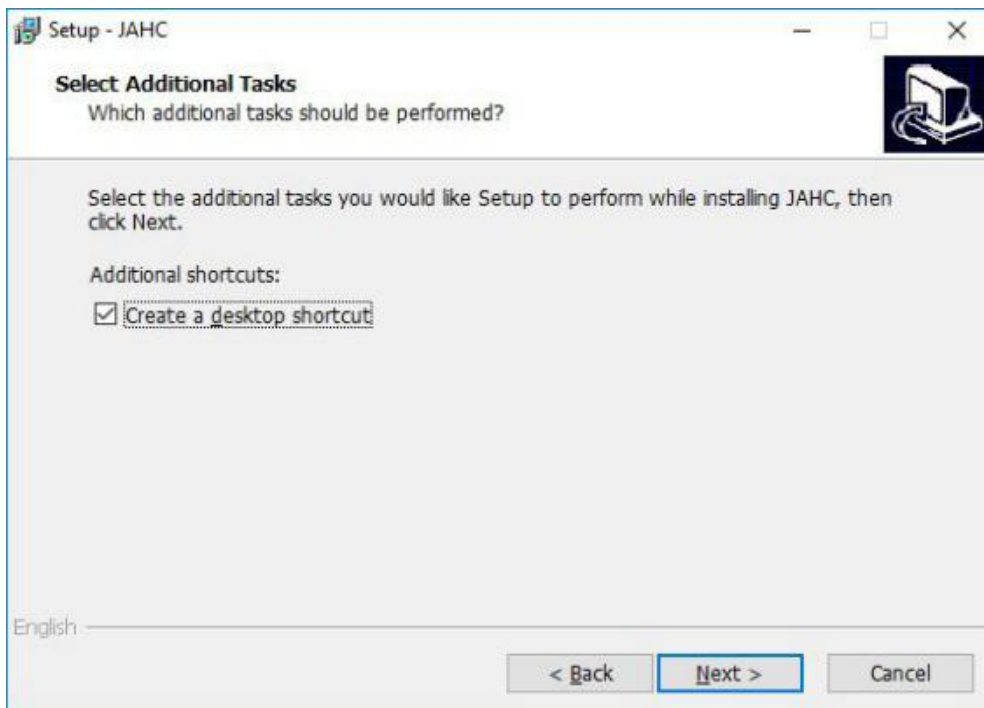

d. Click [Install] button to continue the installation.

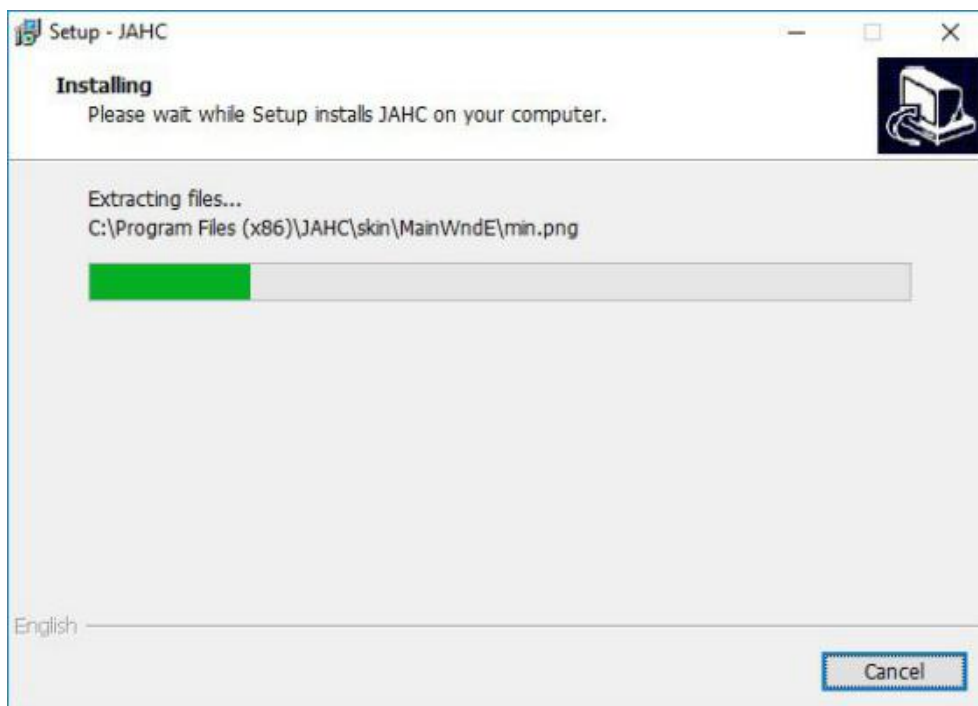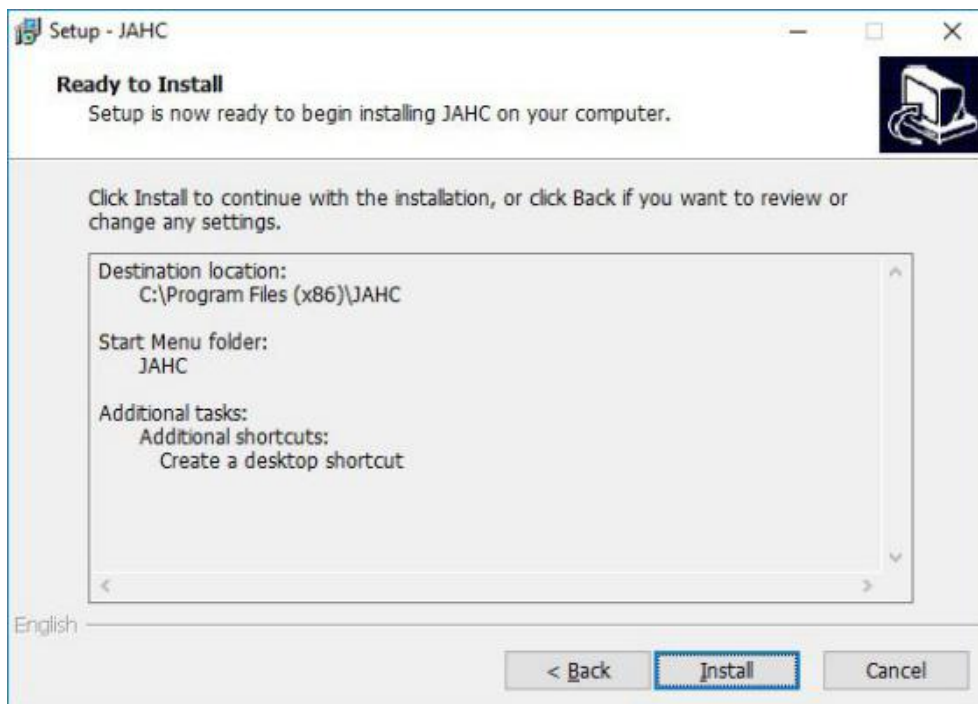


e. Click [Finish] button to finish the installation. You can select [Launch JAHC] to run the software automatically after finishing the installation.




Notice: The JAHC will be added into boot item when it is installed. It will start up when system boot up.

5.2.3 Startup & shutdown time setup

After install the JAHC software, double click the JAHC icon on taskbar and the setup menu will pop up.

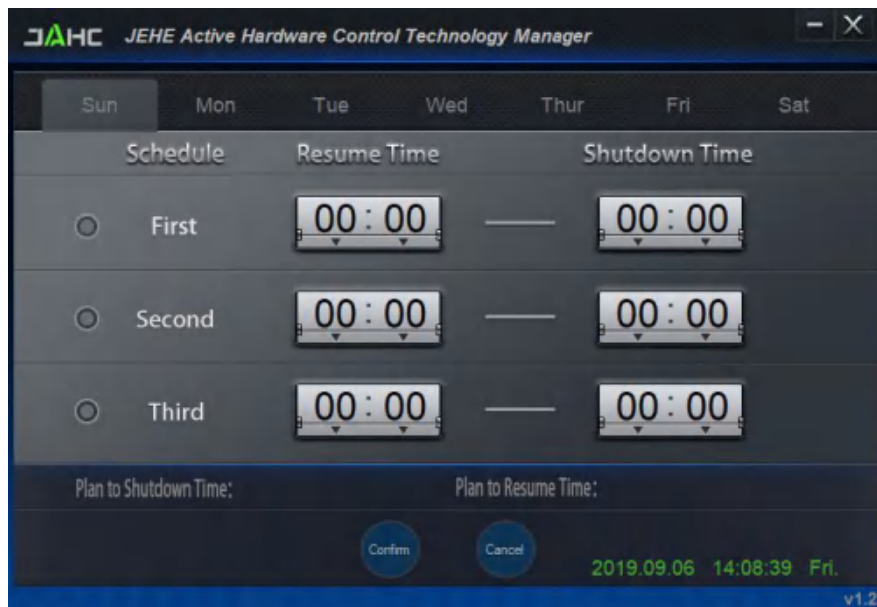

One week as a circle, maximum 3 schedules per day. Select each schedule to set up the resume time and shutdown time. Click [Confirm] button to launch the schedule.

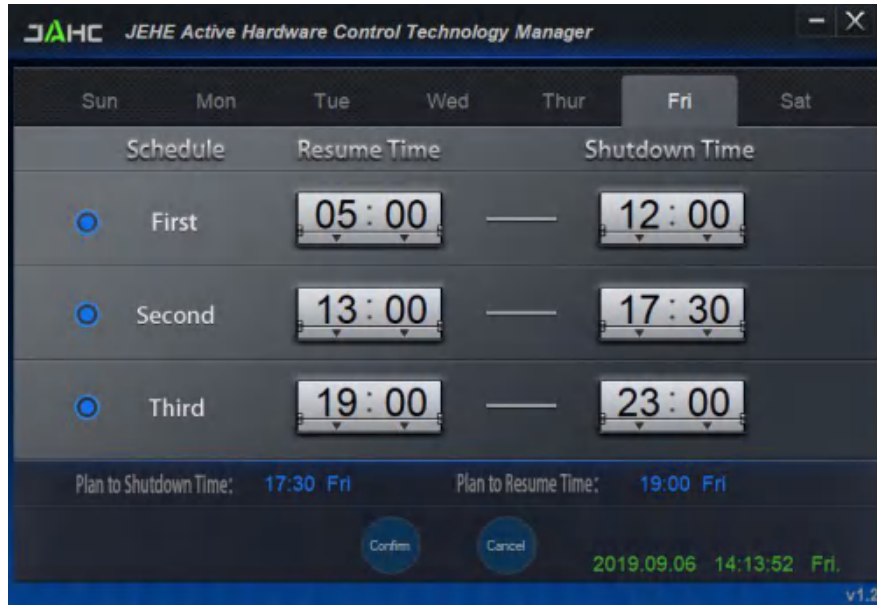


After finishing the setup, the menu window will notice the resume time and shutdown time.

▲ Caution: If the interval from shutdown time to next resume time is less than 3 minutes, the system will not shut down.


Click [Cancel] button to restore the time settings and cancel the shutdown status.

Click [X] button to hide the menu. You can find it on taskbar.


Right click the JAHC icon on taskbar and select [exit] to exit the software.

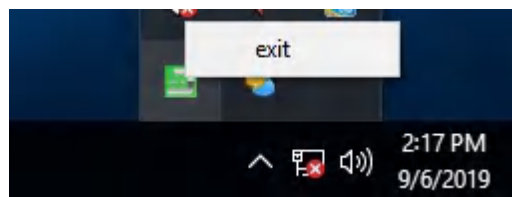

Shutdown caution: the shutdown caution will pop up before the system shutdown.

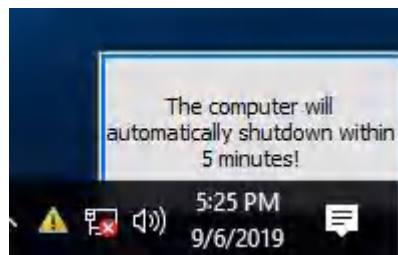

You can double click the message window and a new dialog box will pop up.

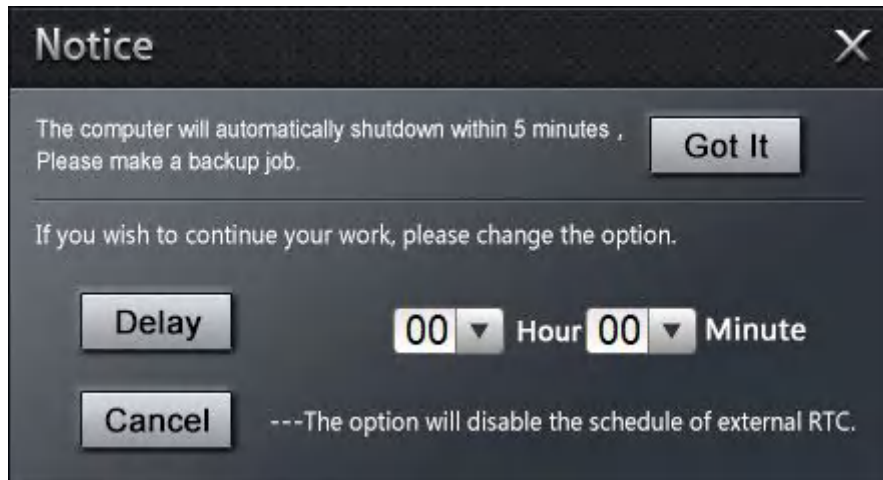

You can click [Delay] button and set up the time to delay the shutdown or click [Cancel] button to cancel the shutdown.

5.3 Watchdog API and instruction

Please contact Giada FAE (email:support@giadatech.com) for watchdog API software and instruction.



Shenzhen JEHE Technology Development Co., Ltd.

Website: www.giadatech.com

Phone: +86-755-33300336

Email: support@giadatech.com

Address: 1~3/F, Block A, Tsinghua Information Harbor, North Section,
Shenzhen Hi-tech Park, Nanshan District, Shenzhen, China